

FEATURES  
GUIDE

PRESCOTT  
COLLECTION





# DATA SHEET PRESCOTT COLLECTION

Pelle bovina mezzo fiore a grana naturale di spessore finito 1,2 – 1,4 mm.  
 Superficie media 4,8 – 5,0 m<sup>2</sup>. Concia al cromo.  
 Tintura passante; rifinizione con pigmenti e resine. Articolo con mano morbida, tatto ceroso e aspetto semiopaco.

Bovine of Extra European origin, lightly buffed natural grain.  
 Thickness 1.2 – 1.4 mm. Chrome tannage. The average size of each hide is around 4.8 – 5.0 sqm.  
 Through dyed; finishing with resins and pigments.  
 Article with a pigmented and protective coat, with a soft, waxy feel and semi-matt appearance.

Südamerikanisches Rindsleder mit natürlicher Oberfläche.  
 Stärke 1,2 – 1,4 mm. Durchschnittliche Hautgröße ca. 4,8 – 5,0 qm.  
 Hochwertiges Leder mit wachsartigem, weichem Griff und seidenmatter Optik.

Vachette rectifié ou corrigé et grains naturels d'origine Extra-européenne.  
 Epaisseur: 1,2 – 1,4 mm. Superficie moyenne: 4,8 – 5,0 m<sup>2</sup>.  
 Pigmentation aqueuse avec application d'une résine donnant un touché très souple et ciré. Aspect: semi-opaque.

Analisi Test Analysen Essai	Metodo di prova Test Method Prüfverfahren Test Méthode	Unità di misura Measurement Unit Maßeinheit Unité de Mesure	Garantito Guaranteed Garantiert Assuré
Resistenza allo sfregamento tipo Veslic Colour fastness to and fro rubbing Abriebfestigkeit nach Veslic Résistance aux frottements (Veslic)	Secco - Dry - Trocken - A sec 500 c Umido - Wet - Nass - Humide 250 c	UNI EN ISO 11640 ISO 105 A03	> = 4 > = 3/4
Sudore Alcalino Sweat Alkaline Solution Alkalischer Schweiß Sueur Alcaline ISO 11641 pH 8	Sudore - Sweat - Schweiß - Sueur 80 c		> = 3/4
Resistenza alla luce, lampada ad arco di Xenon Colour fastness to artificial light Xenon arc UV-Beständigkeit, Xenon ARC-Labortest Résistance à la lumière, lampe Xénon		UNI EN ISO 105 B02 Scala dei Blu Blue Scale Blauskala Echelle des bleus	> = 5
Adesione della rifinizione Finish Adhesion Haftung der Oberflächenbehandlung Adhésion du film	ISO 11644	N/Cm	> = 2,5
Resistenza alla flessione Flexing endurance Biegefestigkeit Résistance à la flexion	ISO 5402	Cicli Cycles Zyklen Cycles	> 50.000
Determinazione del pH Determination of pH Bestimmung vom pH-Wert Evaluation du pH	ISO 4045	pH	> = 3,5
Indice di differenza (Solo per pH < 4) Difference figure ( only for pH < 4) Differenzindex (nur für pH < 4) Indice de différence (seulement pour le pH < 4)			< = 0,7
Resistenza allo Strappo Pantalone Tear strength - Single edge tear Reißfestigkeit Hose Résistance au déchirement	ISO 3377-1	N	> = 20



# LEATHER CARE INSTRUCTIONS CLASSIC COLLECTION

## **Protect against excessive sunlight, dryness and heat:**

Sunlight will fade and dry out the leather.

Dryness will cause the leather to crack.

Heat will dry out the leather and cause further damage.

## **How to remove spots and stains:**

Blot excess liquid up as quickly as possible with a clean microfibre cloth.

If necessary, use clean lukewarm water only and let dry naturally. Do not dry with hair dryer, etc.

If water is used, clean the entire area where spot occurred seat cushion, arm, etc.

## **DO NOT RUB.**

## **How to remove butter, oil or grease:**

Wipe excess butter, oil or grease off the leather with a clean microfibre cloth. Then leave it alone as the spot should dissipate as much as possible into the leather in a short period of time.

**Do not apply** water or try to wash the butter, oil or grease spot.

## **How to remove chewing gum:**

Place ice cubes in a plastic bag and apply on the chewing gum. Wait several minutes, lift the ice bag and remove the chewing gum.

## **General Care**

**DO NOT USE CHEMICALS, SADDLE SOAP, CLEANING SOLVENTS, FURNITURE POLISH, OILS, VARNISH, ABRASIVE CLEANERS, SOAP OR AMMONIA WATER.**


**For further informations, contact AMS.**

These are recommended or suggested methods of cleaning. The manufacturer is not responsible for damage incurred while cleaning. Always try the cleaning method in a hidden area first to see results.



## PRODUCT FEATURES AND IMPERFECTIONS THAT MAY OCCUR


### NECK CREASES

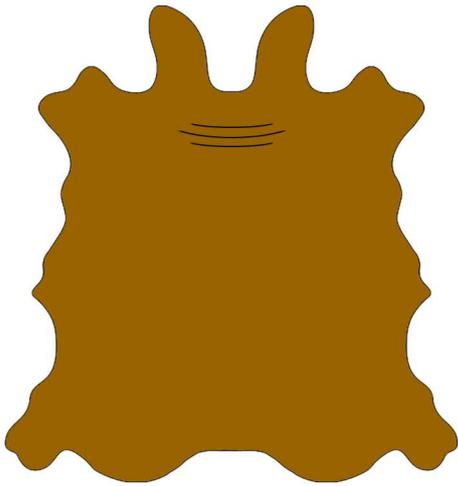

Neck creases are a normal phenomenon and do not affect the value of the leather. Neck wrinkles naturally occur in a hide as a result of the neck stretching and contracting.



### NATURAL GRAIN

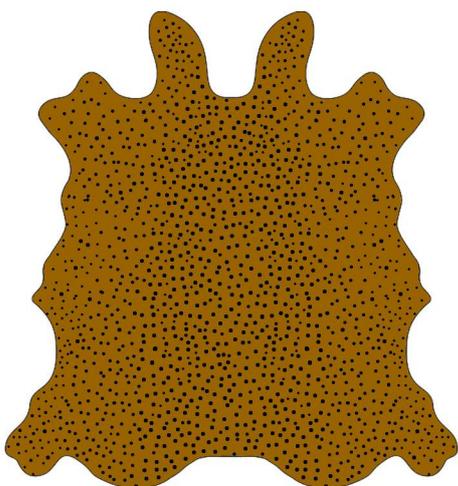

Bovine of Extra-European origin, with a lightly buffed natural grain.




Note: Although every effort is made to ensure that the leather ordered match the colours from our catalogues, slight variations may occur from batch. We advise to always make an sample request from the colour you may need.



## PRODUCT FEATURES AND IMPERFECTIONS THAT MAY OCCUR

### MEASURES

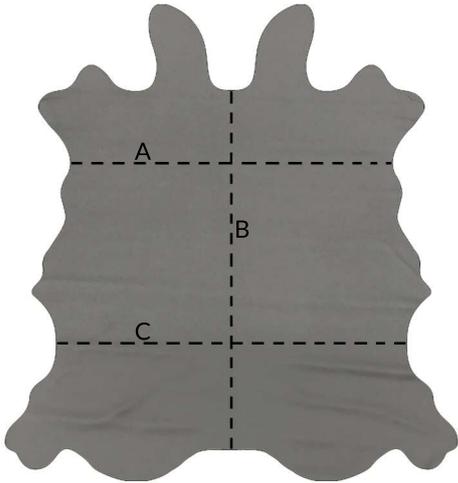

The average size of a hide in Prescott collection is 5.00 M2.

A - 1.70 MT (+-)

B - 2.15 MT (+-)

C - 1.95 MT (+-)

Note: Although every effort is made to ensure that the leather ordered match the colours from our catalogues, slight variations may occur from batch. We advise to always make an sample request from the colour you may need.